


NOTES

- SWITCH SETTINGS
THE POSITION OF THE DIP SWITCHES 'SW2' MUST BE SET AS SHOWN (IE: DOT SHOWING CLOSED CONTACT ON TWO RIGHT HAND) FOR THE CARD TO OPERATE CORRECTLY.
- SWITCHES 'SW3' CONTROL THE 0-5V OUTPUT IF PACK SERIAL DATA BUS COMMUNICATIONS FAIL.
EACH SWITCH WHEN IN THE ON POSITION ADDS THE VALUE SHOWN BELOW TO THE OUTPUT. EXAMPLE BELOW GIVES:-
0.7 + 0.62 = 0.69 OUTPUT.

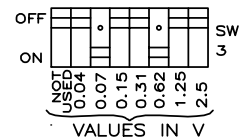

JTL SYSTEMS LTD.
41, KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE. RG14 5SJ
TEL: 01635-263646 FAX: 01635-263647

ISS	DESCRIPTION	APP'D	DATE
3	AMENDED SW2 SETTING	MJK	7/95
2	VOLTAGE OUTPUT	PT	1/93
1	ORIGINAL ISSUE	PT	1/93

TITLE: COMPRESSOR INTERFACE WIRING
(FOR CPxx CONTROLLERS)

TYPE: IF-5

PROJ.	DRG No.	SHT	OF	ISS
CP	00651	1	1	3