

IF14 COMPRESSOR OUTPUT CONFIGURATION FOR PACK TYPES EPIC AND EPID

The IF14 compressor output configuration depends on setting item 167

| Item 167 | COMPRESSOR BOARD 1 | | | | | | | COMPRESSOR BOARD 2 | | | | | | |
|-----------------|-----------------------|---------------------|---------------------|---------------------|---------------------|---------------------|------------------|--------------------|------------------|---------|---------|---------|---------|---------|
| | Relay 1 | Relay 2 | Relay 3 | Relay 4 | Relay 5 | Relay 6 | Relay 7 | Relay 1 | Relay 2 | Relay 3 | Relay 4 | Relay 5 | Relay 6 | Relay 7 |
| 1 (CF-1) | COMPRESSOR INVERTER 1 | COMPRESSOR 2 RUN | COMPRESSOR 2 UNLOAD | COMPRESSOR 3 RUN | COMPRESSOR 4 RUN | COMPRESSOR 5 RUN | COMPRESSOR 6 RUN | - | - | - | - | - | - | - |
| 2 (CF-2) | COMPRESSOR INVERTER 1 | COMPRESSOR 2 RUN | COMPRESSOR 2 UNLOAD | COMPRESSOR 3 RUN | COMPRESSOR 3 UNLOAD | COMPRESSOR 4 RUN | COMPRESSOR 5 RUN | COMPRESSOR 6 RUN | - | - | - | - | - | - |
| 3 (CF-3) | COMPRESSOR 1 RUN | COMPRESSOR 1 UNLOAD | COMPRESSOR 2 RUN | COMPRESSOR 3 RUN | COMPRESSOR 4 RUN | COMPRESSOR 5 RUN | COMPRESSOR 6 RUN | - | - | - | - | - | - | - |
| 4 (CF-4) | COMPRESSOR 1 RUN | COMPRESSOR 1 UNLOAD | COMPRESSOR 2 RUN | COMPRESSOR 2 UNLOAD | COMPRESSOR 3 RUN | COMPRESSOR 4 RUN | COMPRESSOR 5 RUN | COMPRESSOR 6 RUN | - | - | - | - | - | - |
| 5 (CF-5) | COMPRESSOR 1 RUN | COMPRESSOR 1 UNLOAD | COMPRESSOR 2 RUN | COMPRESSOR 2 UNLOAD | COMPRESSOR 3 RUN | COMPRESSOR 3 UNLOAD | COMPRESSOR 4 RUN | COMPRESSOR 5 RUN | COMPRESSOR 6 RUN | - | - | - | - | - |

Configuration settings 3 - 5 are available from EPIC v0.00.5 on and EPID v0.00.2 on
 Item 167 settings 3-5 CANNOT be set when inverter control is required on compressor 1