


PA410 UNIVERSAL PLANT ALARM MONITOR APPLICATION DRAWING
415V PHASE FAILURE

PA410 SETTINGS
ALL DEFAULT EXCEPT

ITEM

- 30 - Set to 5
- 31 - Set to 1
- 33 - Set to 1
- 35 - Set to 1
- 51 - Set to 1
- 53 - Set to 2
- 55 - Set to 3
- 61 - Set to 1
- 63 - Set to 1
- 65 - Set to 1

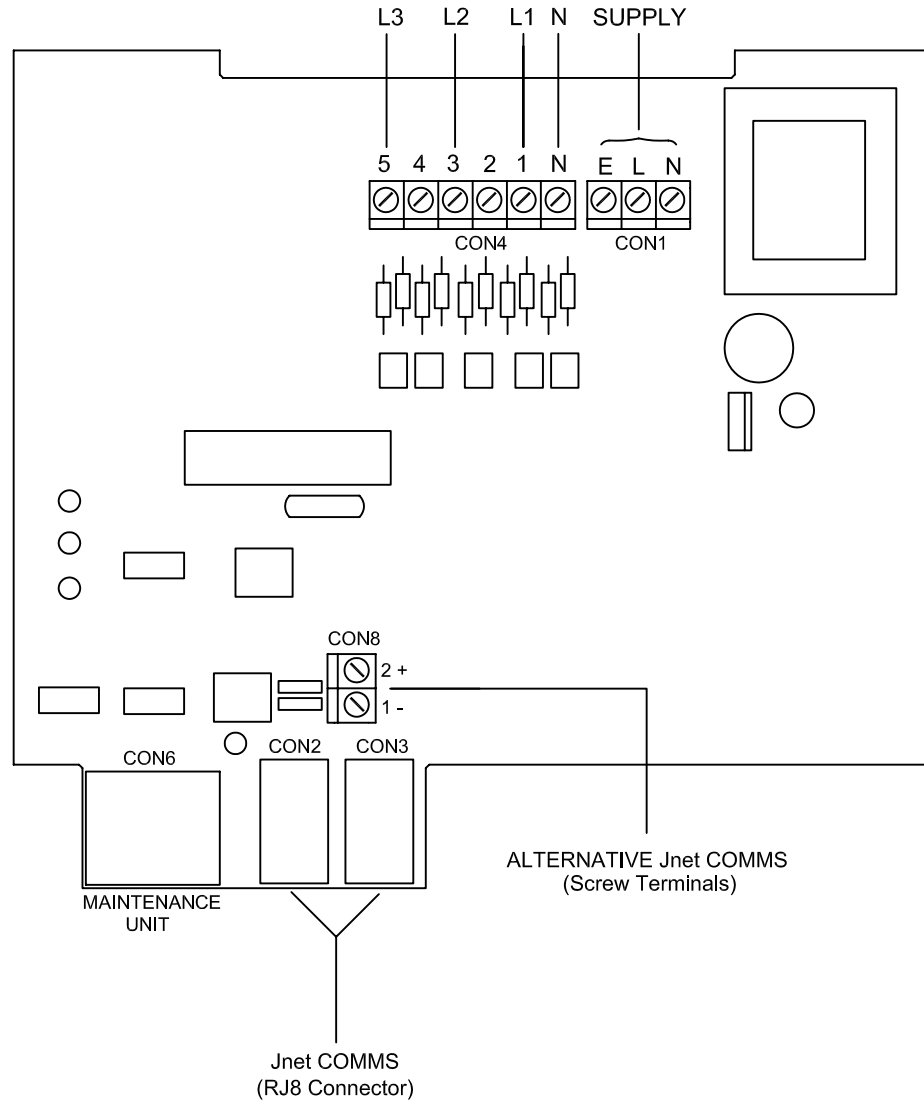

NOTES:

1. INPUTS 2 AND 4 MUST NOT BE CONNECTED IN THIS APPLICATION.
2. Input Line voltage should be connected to the numbered terminals and the neutral to the terminal marked N (common neutral).

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
1	ORIGINAL ISSUE	MJK	02/09

TITLE: PA410
UNIVERSAL PLANT ALARM MONITOR (5i/p)
APPLICATION DRAWING

PROJ.	DRG No:	SHT	OF	ISS.
	03515	1	1	1