



**IMPORTANT NOTE**

1. TO ENSURE THAT INTERNALLY FITTED SUPPRESSORS WORK CORRECTLY:- ENSURE THAT LINE VOLTAGE IS CONNECTED TO TERMINALS MARKED 'LN' AND EACH LOAD IS CONNECTED TO TERMINALS MARKED 'NO' OR 'NC'.
2. WHEN USING AS A SUCTION VALVE CONTROL USE A NORMALLY OPEN VALVE OR A FOLLOWER RELAY.
3. THE LCCT CONTROLLER MUST BE EARTHED TO THE CHASSIS VIA THE CONTROLLER FIXING HOLE AS SHOWN.
4. PLANT INPUTS TO CON B MUST BE ON THE SAME PHASE AS THE SUPPLY ON CON A.  
THIS UNIT IS NOT RATED FOR 415V

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

<b>JTL SYSTEMS LTD</b> 41 KINGFISHER COURT, HAMBRIDGE RD, NEWBURY, BERKSHIRE. R14 5SJ TEL: 01635-263646 FAX: 01635-263647			
ISS	DESCRIPTION	APP'D	DATE
6	REMOVED CAB33 & ADDED NOTE	MJK	8/95
5	UPDATED & ADDED CAB33	MJK	7/98
4	ADDED CONFX4T	MJK	5/96
TITLE: COLDSTORE CONTROLLER WIRING			
TYPE: LCCT			
PROJ.	DRG No:	SHT	OF
LC	00661	1	1
			ISS
			6