


IMPORTANT NOTES:

- TO ENSURE THAT INTERNALLY FITTED SUPPRESSORS WORK CORRECTLY- ENSURE THAT LINE VOLTAGE IS CONNECTED TO TERMINALS MARKED 'LN' AND EACH LOAD IS CONNECTED TO TERMINALS MARKED 'NO' OR 'NC'
- TO MEET EMC REQUIREMENTS THE CONTROLLER MUST BE INSTALLED ACCORDING TO THE INSTALLATION REQUIREMENTS SHEET FOR THIS PRODUCT.
- THE LCID CONTROLLER MUST BE EARTHED TO THE CHASSIS VIA THE CONTROLLER FIXING HOLE AS SHOWN.
- THE DEFROST 3/FAN/HEATER OUTPUT RELAY CAN BE SELECTED FOR FAN OR HEATER CONTROL. (SEE ITEM 104 DETAIL IN MANUAL).
- PLANT INPUTS TO CON B MUST BE ON THE SAME PHASE AS THE SUPPLY ON CON A.
THIS UNIT IS NOT RATED FOR 415V

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

|  JTL SYSTEMS LTD 41 KINGFISHER COURT, HAMBRIDGE RD, NEWBURY, BERKSHIRE. RG14 5SJ TEL: 01635 47585 FAX: 01635 31888 | | | |
|---|------------------------------|-------|------|
| ISS | DESCRIPTION | APP'D | DATE |
| 3 | ADDED CONFXTT | MJK | 5/96 |
| 5 | REMOVED CON/T'S & ADDED NOTE | MJK | 7/88 |
| 4 | UPDATED CONVERTER BOARD | MJK | 2/97 |
| TITLE: CABINET CONTROLLER WIRING | | | |
| TYPE: LCID | | | |
| PROJ. | DRG No: | SHT | OF |
| LC | 01240 | 1 | 1 |
| | | | ISS. |
| | | | 5 |