


POWER CONNECTIONS

SIGNAL CONNECTIONS

CR110 COLDSTORE MONITOR

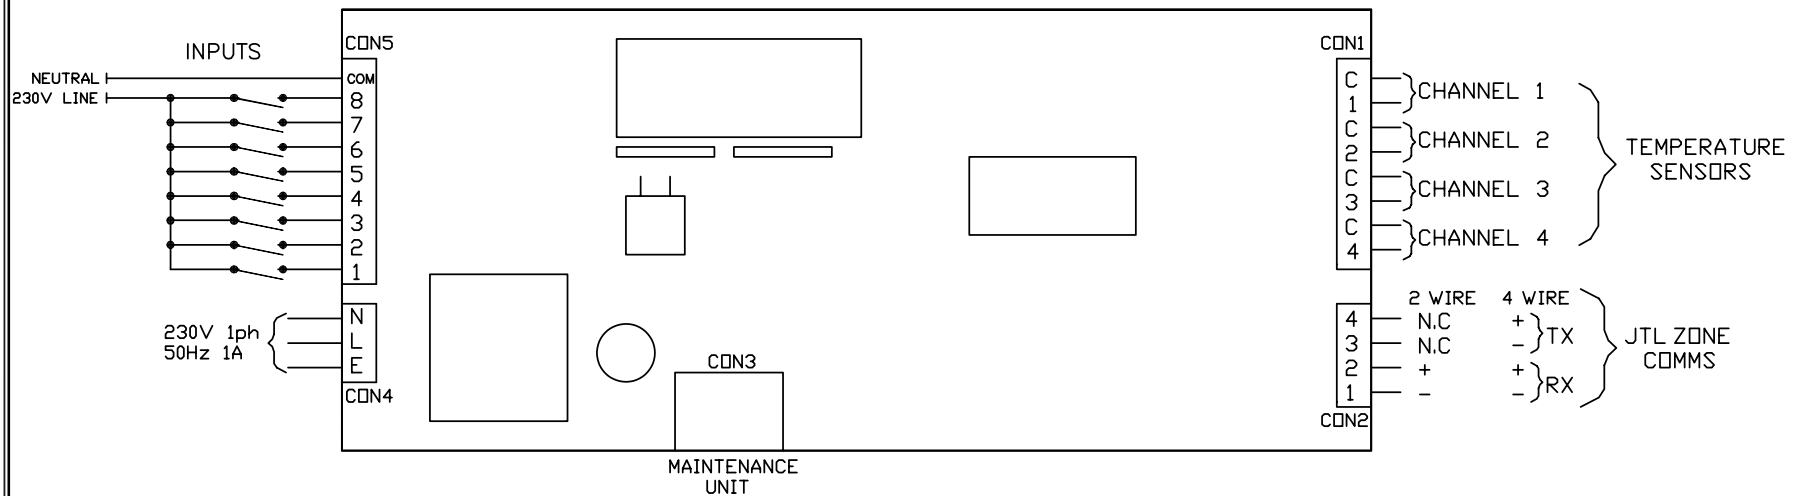

INPUTS*	SIGNAL	
1	DEFROST INITIATION	CHANNEL 1
2	DEFROST INITIATION	CHANNEL 2
3	DEFROST INITIATION	CHANNEL 3
4	DEFROST INITIATION	CHANNEL 4
5	PLANT ALARM	CHANNEL 1
6	PLANT ALARM	CHANNEL 2
7	PLANT ALARM	CHANNEL 3
8	PLANT ALARM	CHANNEL 4

**ELECTRICAL SAFETY**  
 THIS UNIT IS SUITABLE FOR SINGLE PHASE 230V OPERATION ONLY.  
 ON NO ACCOUNT SHOULD 3 PHASE (415V) CONNECTIONS BE MADE TO IT  
 i.e. THE INPUTS MUST BE ON THE SAME PHASE AS THE SUPPLY.

**NOTE**  
 \* DEFROST AND PLANT INPUTS MAY BE SELECTED FOR EITHER  
 LINE VOLTAGE PRESENT OR ABSENT INDICATING SIGNAL.

IF INPUTS ARE USED A NEUTRAL MUST BE CONNECTED TO  
 CON5 - COM.

**CE CONFORMANCE**  
 This product conforms with EU standards when installed in  
 accordance with the JTL installation requirements.

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

**JTL SYSTEMS LTD**  
 UNIT 41 KINGFISHER COURT, HAMBRIDGE RD,  
 NEWBURY, BERKS. RG14 5SJ  
 TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
2	ADDED ELECTRICAL SAFETY NOTE	MJK	7/96
1	ORIGINAL ISSUE	MJK	2/96

TITLE:  
**QUAD COLDSTORE MONITOR**

TYPE: CR110

PROJ.	DRG No	SHT	OF	ISS
	01663	1	1	2