



IMPORTANT NOTES:

1. TO ENSURE THAT INTERNALLY FITTED SUPPRESSORS WORK CORRECTLY:- ENSURE THAT LINE VOLTAGE IS CONNECTED TO TERMINALS MARKED 'LN' AND EACH LOAD IS CONNECTED TO TERMINALS MARKED 'NO' OR 'NC'.
2. WHEN USING AS A SUCTION VALVE CONTROL USE A NORMALLY OPEN VALVE OR A FOLLOWER RELAY.
3. THE LCCP CONTROLLER MUST BE EARTHED TO THE CHASSIS VIA THE CONTROLLER FIXING HOLE AS SHOWN.
4. PLANT INPUTS TO CON B MUST BE ON THE SAME PHASE AS THE SUPPLY ON CON A.
THIS UNIT IS NOT RATED FOR 415V

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

		JTL SYSTEMS LTD 41 KINGFISHER COURT, HAMBRIDGE RD, NEWBURY, BERKSHIRE, RG14 5SJ TEL: 01635 263646 FAX: 01635 263647	
ISS	DESCRIPTION	APP'D	DATE
2	REMOVED CAB33 & ADDED NOTE	MJK	8/98
1	ORIGINAL ISSUE	MJK	2/97
TITLE: COLDSTORE CONTROLLER WIRING			
TYPE: LCCP			
PROJ	DRG No:	SHT	OF
LC	01969	1	1
			ISS
			2