



NOTES:

1. TO ENSURE THAT INTERNALLY FITTED SUPPRESSORS WORK CORRECTLY:- ENSURE THAT LINE VOLTAGE IS CONNECTED TO TERMINALS MARKED 'LN' AND EACH LOAD IS CONNECTED TO TERMINALS MARKED 'NO' OR 'NC'.
2. THE DEFROST OUTPUT CAN BE USED FOR DEFROST TERMINATION OR DEFROST CONTROL (SEE ITEM 75 DETAIL IN MANUAL).
3. THE LIGHTING/NIGHT BLIND OUTPUT RELAY CAN BE SELECTED FOR CONNECTION TO A SLAVE RELAY WITH NORMALLY OPEN OR NORMALLY CLOSED CONTACTS.
4. THE LCIL CONTROLLER MUST BE EARTHED TO THE CHASSIS VIA THE CONTROLLER FIXING HOLE AS SHOWN.

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

JTL SYSTEMS LTD 41 KINGFISHER COURT, HAMBRIDGE RD, NEWBURY, BERKSHIRE, RG14 5SJ TEL: 01635 263646 FAX: 01635 263647		
ISS	DESCRIPTION	APP'D DATE
3	ADDED LCPL	MJK 1/01
2	REMOVED CON BOARD	MJK 7/98
4	SWAPPED INPUTS	MJK 3/01
TITLE: CABINET CONTROLLER WIRING		
TYPE: LCIL & LCPL		
PROJ	DRG No:	SHT OF ISS
LC	01992	1 1 4