


# SITE PC TO NETWORK CONTROLLER CONNECTION DIAGRAM USING CAT5 CABLE

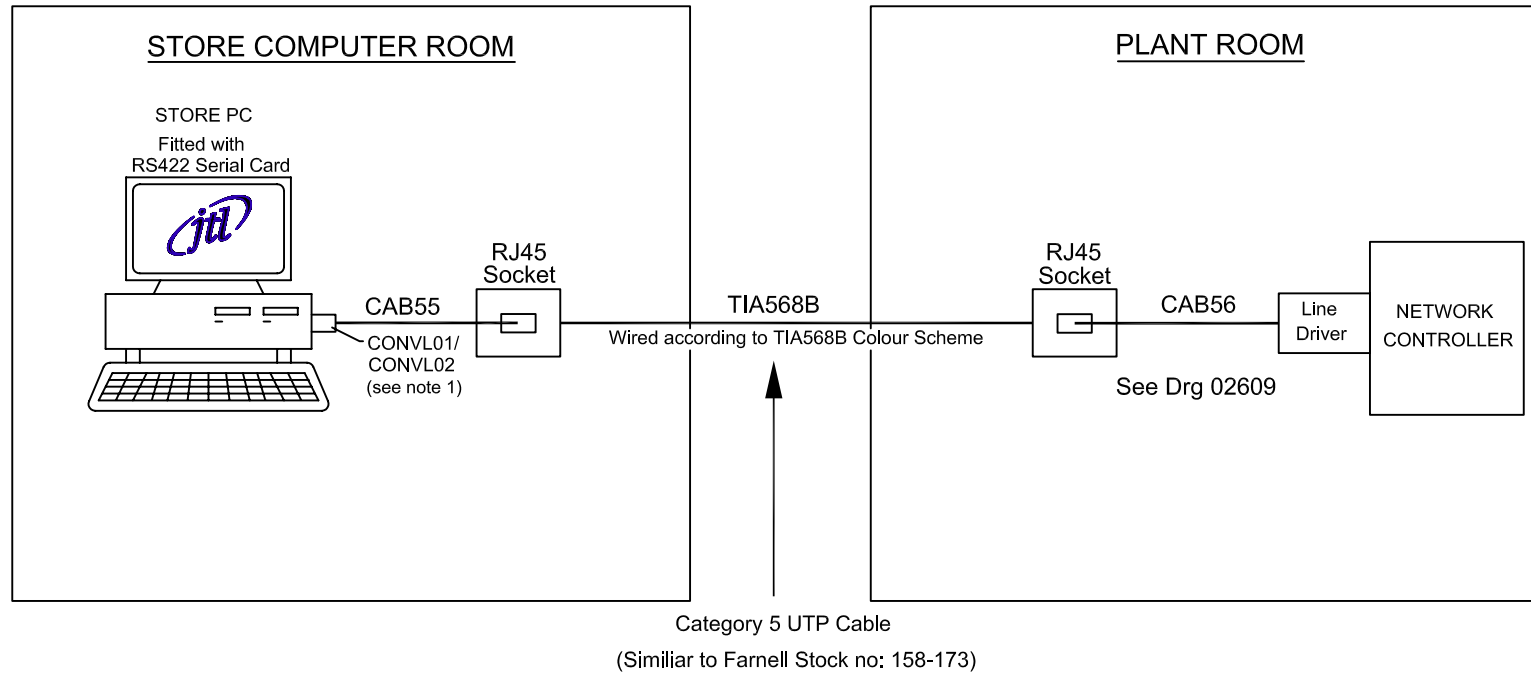

## NOTE:

1. Use CONVL01 where "B & B Electronics" RS422 Card fitted and CONVL02 where "BRAINBOXES" RS422 Card fitted.
2. Where 'Brainboxes' Card is used, neither of the two jumpers (on the card) should be fitted.



JTL SYSTEMS LTD  
41 KINGFISHER COURT, HAMBRIDGE RD,  
NEWBURY BERKSHIRE: RG14 5SJ  
TEL: 01635 263646 FAX: 01635 263647

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

Doc 02610 ISS 4 Feb 2003