


IF13 JTL PLANT INTERFACE

Description:

JTL Plant Control Interface comprising 7 suppressed changeover relay outputs. A JTL Maintenance Unit is used to configure this product.

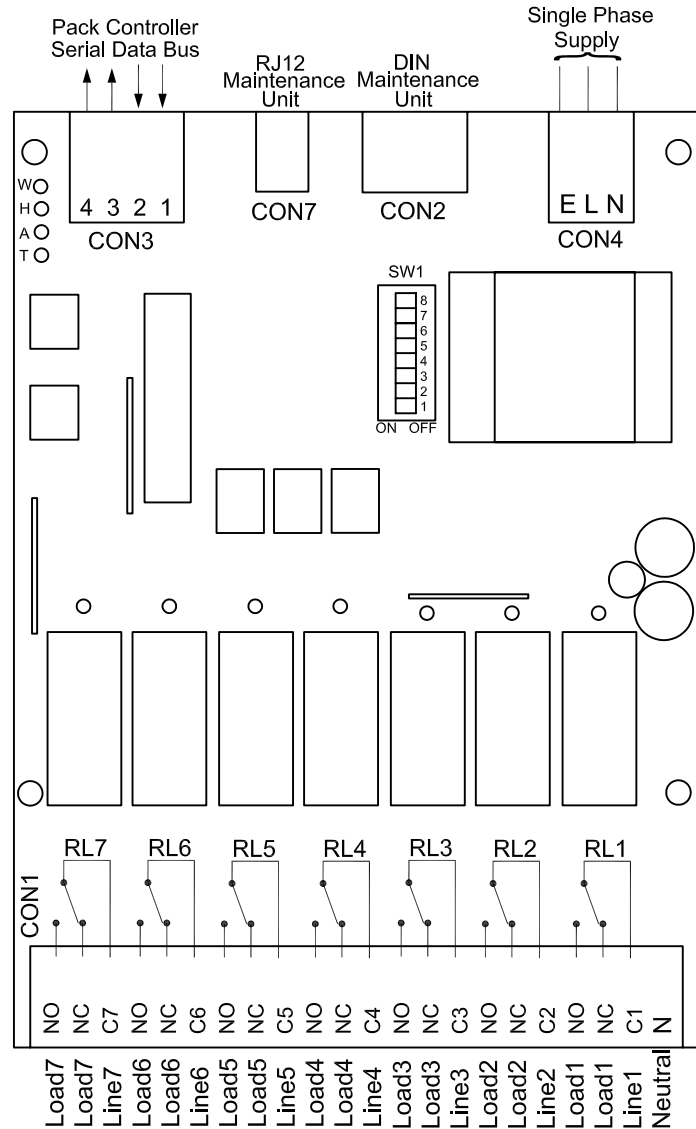

NOTES:

1. Outputs on CON1:
To ensure that the internally fitted suppressors work correctly, connect line voltages to terminals prefixed with 'C' and the corresponding load to terminals marked 'NO' or 'NC' (normally open or closed respectively). Ensure also the neutral is connected to terminal marked 'N'.
2. Switch positions:
DIP switch SW1 controls the output relays if pack serial data bus communications fail. Switch closed (ON) = corresponding output relay energised.
3. Interface must be configured according to function using JTL Maintenance Unit.



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
1	ORIGINAL ISSUE	MJK	07/02

TITLE:
**IF13
PLANT INTERFACE WIRING**

PROJ.	DRG No:	SHT	OF	ISS.
	02763	1	1	1

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP