


IF14 JTL PLANT INTERFACE

Description:

JTL Plant Control Interface comprising 8 opto-isolated mains digital inputs 7 suppressed non-changeover relay outputs, and selectable current or voltage analogue output. A JTL Maintenance Unit is used to configure this product.

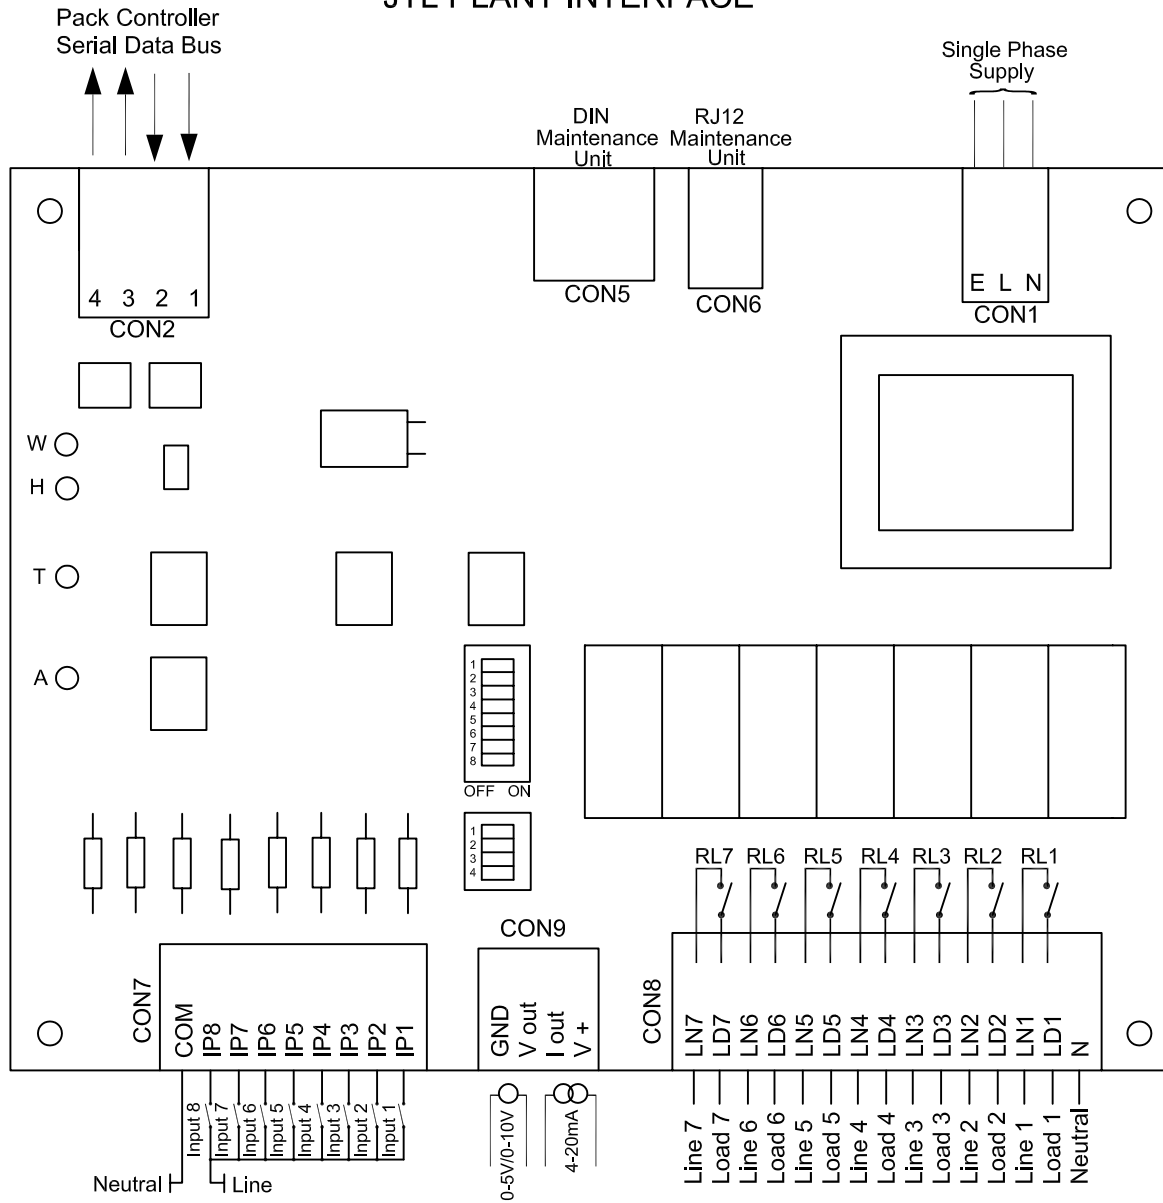

NOTES:

1. Input states as follows:
Closed contact = Input present
Open contact = Input not present
2. CON7 must have neutral connected to it on terminal marked 'com'.
3. To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Ensure neutral is connected to terminal marked N.
4. Switch positions DIP switch SW1 controls the output relays if pack serial data bus communications fail. Switch closed (ON) = corresponding output relay energised.
5. Interface must be configured according to function using JTL Maintenance Unit.



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APPD	DATE
1	ORIGINAL ISSUE	MJK	11/02

TITLE:
IF14
PLANT CONTROL INTERFACE CONNECTION

PROJ.	DRG No:	SHT	OF	ISS.
	02905	1	1	1

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP