


HP230 CO₂ DISCHARGE CONTROL

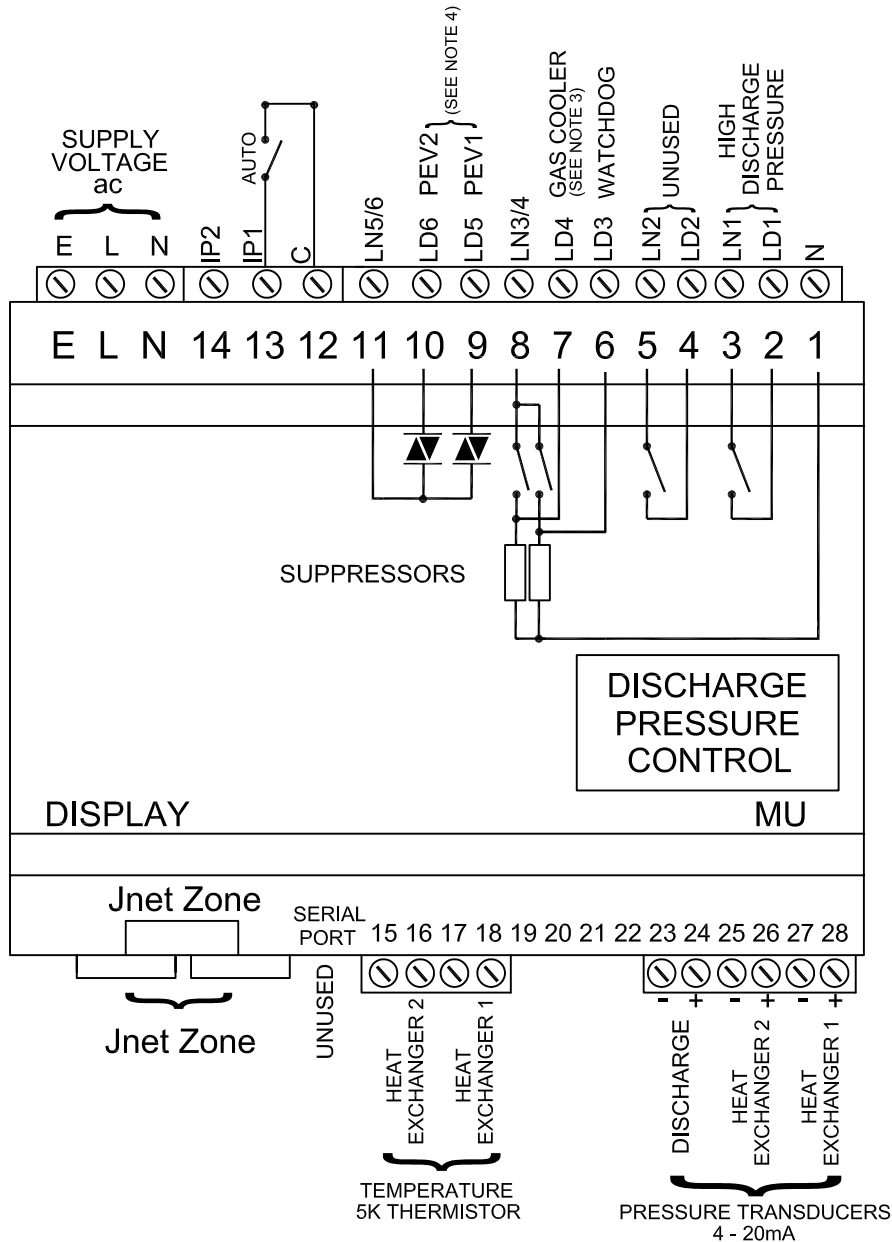

NOTE

1. To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Ensure neutral is connected to terminal marked N. Terminal 1 must have control supply neutral connected to it.
2. Note outputs 1 & 2 are unsuppressed.
3. The gas cooler output is energised for 1st stage control of discharge pressure.
4. When Item 40 is NOT set to superheat control then outputs PEV1 & 2 are energised for 2nd stage control of discharge pressure.



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
3	ADDED NOTES 3 & 4	MJK	06/16
2	UPDATED CONNECTIONS & ADDED NOTE 2	MJK	02/11
1	ORIGINAL ISSUE	MJK	02/11

TITLE:

HP230 CO₂ DISCHARGE CONTROL

PROJ.	DRG No:	SHT	OF	ISS.
	03801	1	1	3

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP