


HP240 CO₂ DISCHARGE CONTROL

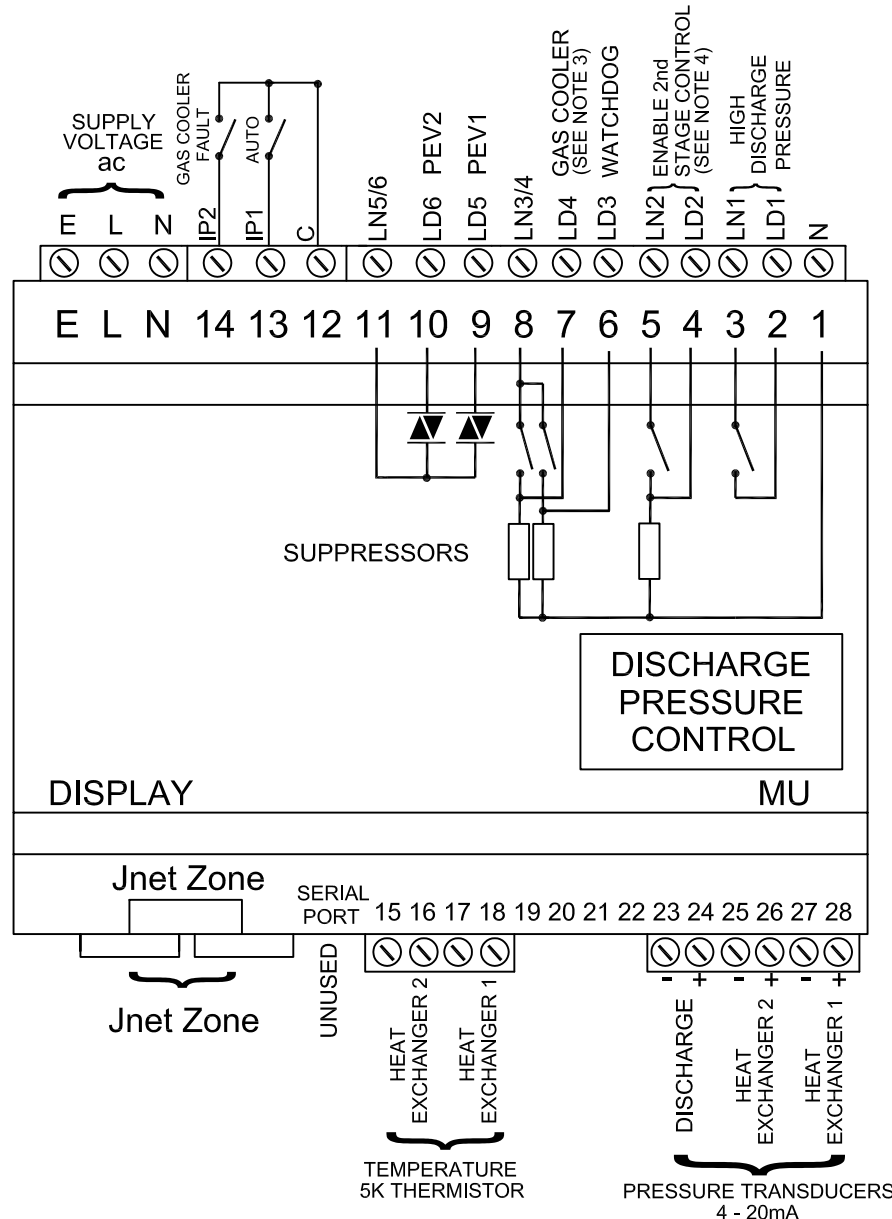

NOTE

1. To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Ensure neutral is connected to terminal marked N. Terminal 1 must have control supply neutral connected to it.
2. Note output 1 is unsuppressed.
3. The gas cooler output is energised for 1st stage control of discharge pressure.
4. When Item 40 is NOT set to superheat control then enable 2nd stage control output is energised for 2nd stage control of discharge pressure.



JTL SYSTEMS LTD
 41 KINGFISHER COURT, HAMBRIDGE RD,
 NEWBURY, BERKSHIRE: RG14 5SJ
 TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
3	GAS COOLER FAULT ADDED	MJK	06/12
2	REJECTOR FAULT ADDED	MJK	05/12
4	ADDED NOTES 3 & 4	MJK	06/16

TITLE:

HP240 CO₂ DISCHARGE CONTROL

PROJ.	DRG No:	SHT	OF	ISS.
	03903	1	1	4