

The HP240 is a spare part which is used to replace the following obsolete JTL product as a spare part:

HP230

The HP240 provides full functionality of the former product.

Electrical

Rewiring is necessary when replacing the obsolete part with the HP240.

HP240 OUTPUT CONVERSION

The output wiring for the heat exchanger enable circuits in terminals 9 & 11 should be moved to terminals 4 & 5. The line voltage being connected to terminal 5 and the load connected to terminal 4.

OTHER CONNECTIONS

No other wiring modifications are required.

Documentation

Full documentation exists for the HP240 but if this is not available the HP230 documents may be used in conjunction with the information above.

Controller Setup

To ensure compatibility when replacing the original part with a HP240, action a factory default setting procedure (Item 9) before setting in the new data.