



SEE 'TEMPERATURE SENSOR' APPENDIX
IN CONTROLLER MANUAL

- ① — AIR ON EVAPORATOR *SEE NOTE
- ② — AIR OFF EVAPORATOR *SEE NOTE
- ③ — EVAPORATOR
- ④ — SUCTION LINE

* NOTE AIR SENSORS SHOULD BE IN CENTRE OF DUCT NOT IN CONTACT WITH METALWORK

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP



JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
2	REDRAWN	MJK	2/99
1	ORIGINAL ISSUE	NMT	3/91

TITLE:
**CABINET TEMPERATURE SENSOR
POSITIONS**

PROJ.	DRG No: 00331	SHT 1	OF 1	ISS. 2
-------	-------------------------	-----------------	----------------	------------------