



SEE 'TEMPERATURE SENSOR' APPENDIX  
IN CONTROLLER MANUAL

- ① — AIR ON EVAPORATOR \*SEE NOTE
- ② — AIR OFF EVAPORATOR \*SEE NOTE
- ③ — EVAPORATOR
- ④ — SUCTION LINE

\* NOTE AIR SENSORS SHOULD BE IN CENTRE OF DUCT NOT IN CONTACT WITH METALWORK

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP



JTL SYSTEMS LTD  
41 KINGFISHER COURT, HAMBRIDGE RD,  
NEWBURY, BERKSHIRE: RG14 5SJ  
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
2	REDRAWN	MJK	2/99
1	ORIGINAL ISSUE	NMT	3/91

TITLE:

CABINET TEMPERATURE SENSOR  
POSITIONS

PROJ.	DRG No:	SHT	OF	ISS.
	00331	1	1	2