



JTL TEMPERATURE SENSOR INSTALLATION

1. PIPE FITTING

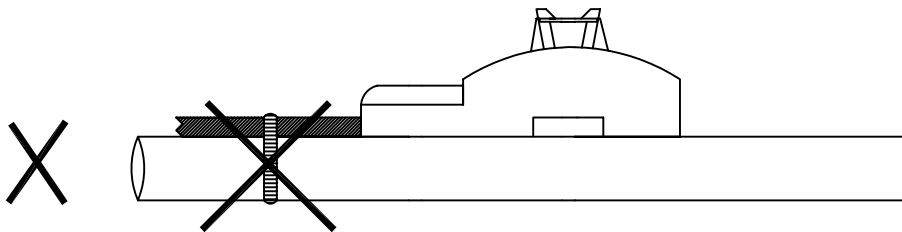


DO NOT TIE WRAP CABLE TO PIPE!

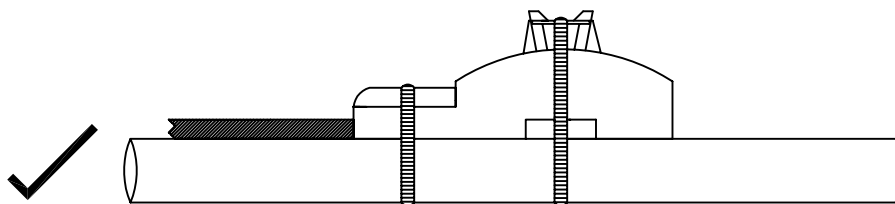

TWO TIE WRAPS

2. AIR FITTING

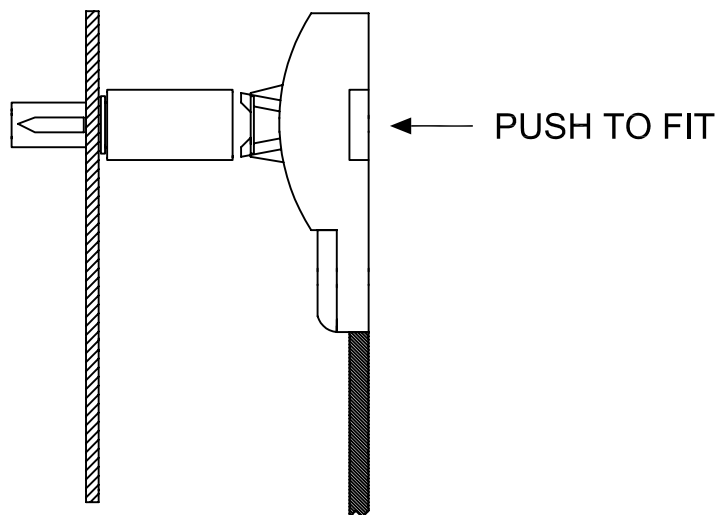

1. DRILL 6.5 mm Ø IN WALL
2. INSERT PLUG
3. INSERT SENSOR INTO PLUG



JTL SYSTEMS LTD.
41 KINGFISHER COURT
HAMBRIDGE ROAD
NEWBURY BERKS RG14 5SJ
TEL: 01635 263646 Fax: 01635 263647
Service 08703218585
Website www.jtl.co.uk

Doc 02510 Iss 3 Aug 2003