



# JTL TEMPERATURE SENSOR INSTALLATION

## 1. PIPE FITTING

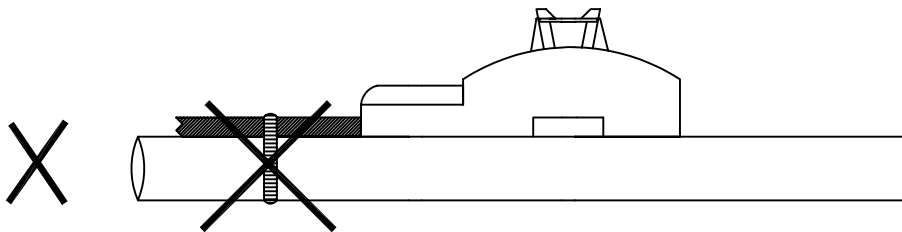


DO NOT TIE WRAP CABLE TO PIPE!

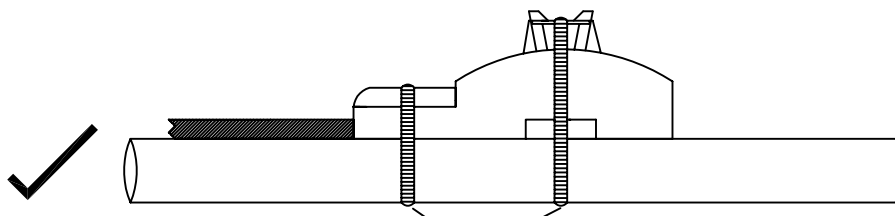

TWO TIE WRAPS

## 2. AIR FITTING

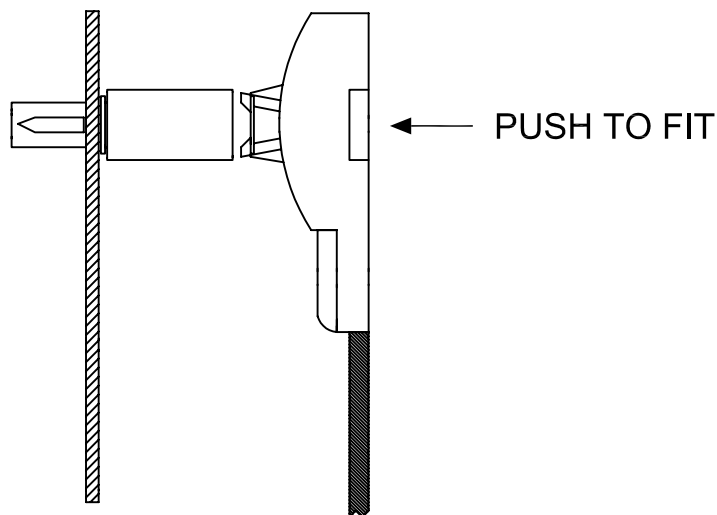

1. DRILL 6.5 mm Ø IN WALL
2. INSERT PLUG
3. INSERT SENSOR INTO PLUG



JTL SYSTEMS LTD.  
41 KINGFISHER COURT  
HAMBRIDGE ROAD  
NEWBURY BERKS RG14 5SJ  
TEL: 01635 263646 Fax: 01635 263647  
Service 08703218585  
Website [www.jtl.co.uk](http://www.jtl.co.uk)

Doc 02510 Iss 3 Aug 2003