

CONTENTS

1. NETWORK IDENTIFICATION 1
 2. INTERFACE PARAMETERS 1
 3. INPUTS & OUTPUTS 1
 4. RESTORE FACTORY DEFAULTS 1
 5. DIAGNOSTIC & TEST FUNCTIONS 2

JTL PLANT INTERFACE ITEM NUMBERS					IF51	
ITEM	DESCRIPTION	CODE	CODE MEANING	BIT	RANGE	ITEM 9 VALUE
				4321		
1. NETWORK IDENTIFICATION						
0	Unit type	IF51	Unit type			
19	Firmware version number					
30	Modbus Device Address	1 - 254	Modbus Device Address		0 - 254	
31	Reserved				0 - 15	
2. INTERFACE PARAMETERS						
37	Communication Protocol/configuration	0	b.ASC	Modbus ASCII protocol	0 - 3	3
		1	J.PL.1	Reserved		
		2	J.PL.2	Reserved		
		3	b.rtu	Modbus RTU protocol		
36	Communication speed	1	1.2	1200 baud	1 - 5	4
		2	2.4	2400 baud		
		3	4.8	4800 baud		
		4	9.6	9600 baud		
		5	19.2	19200 baud		
3. ANALOGUE INPUTS						
111	Sensor 1 Temperature					
121	Sensor 2 Temperature					
131	Sensor 3 Temperature					
141	Sensor 4 Temperature					
151	Sensor 5 Temperature					
161	Sensor 6 Temperature					
4. RESTORE FACTORY DEFAULTS						
9	Set default values	1234	Load default settings			

JTL PLANT INTERFACE ITEM NUMBERS					IF51	
ITEM	DESCRIPTION	CODE	CODE MEANING	BIT	RANGE	ITEM 9 VALUE
				4321		
5. DIAGNOSTIC & TEST FUNCTIONS						
21	Raw ADC Channel 1					
22	Raw ADC Channel 2					
23	Raw ADC Channel 3					
24	Raw ADC Channel 4					
25	Raw ADC Channel 5					
26	Raw ADC Channel 6					
118	ADC Spread Channel 1					
128	ADC Spread Channel 2					
138	ADC Spread Channel 3					
148	ADC Spread Channel 4					
158	ADC Spread Channel 5					
168	ADC Spread Channel 6					
191	Base PCB FW version					
192	Base PCB Sys Info					