

**CONTENTS**

1. NETWORK IDENTIFICATION ..... 1  
 2. INTERFACE PARAMETERS ..... 1  
 3. INPUTS & OUTPUTS ..... 1  
 4. RESTORE FACTORY DEFAULTS ..... 1  
 5. DIAGNOSTIC & TEST FUNCTIONS ..... 2

JTL PLANT INTERFACE ITEM NUMBERS					IF52	
ITEM	DESCRIPTION	CODE	CODE MEANING	BIT	RANGE	ITEM 9 VALUE
				4321		
<b>1. NETWORK IDENTIFICATION</b>						
0	Unit type	IF52	Unit type			
19	Firmware version number					
30	Modbus Device Address	1 - 254	Modbus Device Address		0 - 254	
31	Reserved				0 - 15	
<b>2. INTERFACE PARAMETERS</b>						
37	Communication Protocol/configuration	0	b.ASC	Modbus ASCII protocol	0 - 3	3
		1	J.PL.1	Reserved		
		2	J.PL.2	Reserved		
		3	b.rtu	Modbus RTU protocol		
36	Communication speed	1	1.2	1200 baud	1 - 5	4
		2	2.4	2400 baud		
		3	4.8	4800 baud		
		4	9.6	9600 baud		
		5	19.2	19200 baud		
<b>3. ANALOGUE INPUTS</b>						
111	Input 1 voltage 1mV resolution					
113	Input 1 voltage 10mV resolution					
121	Input 2 voltage 1mV resolution					
123	Input 2 voltage 10mV resolution					
131	Input 3 voltage 1mV resolution					
133	Input 3 voltage 10mV resolution					
141	Input 4 voltage 1mV resolution					
143	Input 4 voltage 10mV resolution					
<b>4. RESTORE FACTORY DEFAULTS</b>						
9	Set default values	1234	Load default settings			

JTL PLANT INTERFACE ITEM NUMBERS					IF52	
ITEM	DESCRIPTION	CODE	CODE MEANING	BIT	RANGE	ITEM 9 VALUE
				4321		
<b>5. DIAGNOSTIC &amp; TEST FUNCTIONS</b>						
10	Processor Alarms	0 32	No Alarms NVRAM fault			
21	Raw ADC Channel 1					
22	Raw ADC Channel 2					
23	Raw ADC Channel 3					
24	Raw ADC Channel 4					
118	ADC Spread Channel 1					
128	ADC Spread Channel 2					
138	ADC Spread Channel 3					
148	ADC Spread Channel 4					
191	Base PCB FW version					
192	Base PCB Sys Info					