


REFRIGERATION ALARM ANNUNCIATOR

ALARM DISPLAY –

Displays the most serious unaccepted alarm, NOT necessarily the most recent alarm. Alarms are reviewed in order of importance.

SIREN – The SIREN

sounds when a new alarm condition has been present on the system for a short period. It is recommended to use the black 'scroll' button to check the ENTIRE list of alarms each time the siren sounds.

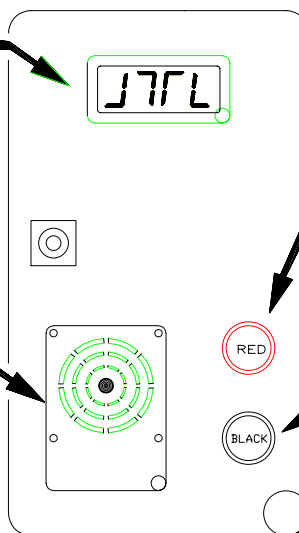

RED – CLEANING/MAINTENANCE PUSH BUTTON

Press this button to enter maintenance mode and select maintenance function.

BLACK – MUTE/SCROLL PUSH BUTTON

Press this button to mute the siren (if allowed) and to scroll through the alarm list of maintenance functions.

TO SELECT CASE CLEANING MODE

PRESS RED
WITHIN 5 SECONDS PRESS BLACK.
PRESS BLACK UNTIL MESSAGE 'A.d.i.S' APPEARS.
WAIT UNTIL 'oFF' IS DISPLAYED
PRESS RED 'on' SHOULD APPEAR
THE DISPLAY SHOULD ALTERNATE 'turn' 'off'
THE ANNUNCIATOR RETURNS TO NORMAL ALARM MODE AFTER 5 MINUTES.

TO SELECT DIAL OUT TEST MODE

PRESS RED
WITHIN 5 SECONDS PRESS BLACK.
PRESS BLACK UNTIL MESSAGE 'd.tst' APPEARS.
WAIT UNTIL 'oFF' IS DISPLAYED
PRESS RED 'on' SHOULD APPEAR
THE DISPLAY THEN SCROLLS AUTOMATICALLY THROUGH THE DIAL-OUT TEST INFORMATION BEFORE RETURNING TO NORMAL ALARM MODE.

NOTE IF EITHER OF THESE FUNCTIONS IS NOT AVAILABLE THEN '--' IS DISPLAYED INSTEAD OF 'oFF'



JTL SYSTEMS LTD.

41 KINGFISHER COURT, NEWBURY,
BERKS, RG14 5SJ (TEL: 01635-47585)

Document No: 01318

ISSUE 2