

NC100 & NC300 RANGE REFRIGERATION ALARM DISPLAY

ALARM DISPLAY

Displays the most serious unaccepted alarms by cycling the display through the Unit Number and the Alarm Description.


If there are no current active alarms, the display will show '—'.

SIREN

The SIREN sounds when a new alarm condition has been present on the system for a short period.

Pressing any of the buttons will mute the siren.

It is recommended to use the 'scroll' button to check the ENTIRE list of alarms each time the siren sounds.

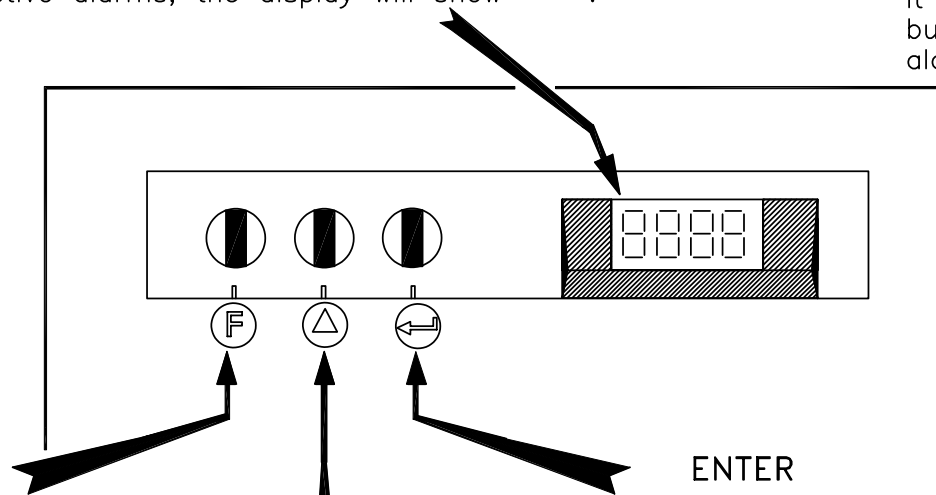

FUNCTION

Press this button to enter Case Cleaning Mode *(see note). The display will then alternate between 'turn' and 'off' until the Cleaning start period expires.

SCROLL

Press this button to scroll through the list of displayed alarms.

ENTER
Unused.

*Note: Case Cleaning Mode has to be enabled for this function to be available.



JTL SYSTEMS LTD.
41 KINGFISHER COURT,
NEWBURY, BERKS. RG14 5SJ

JTL HELPDESK NO. 0870 321 5792

THIS IS AN UNCONTROLLED COPY – UNLESS STAMPED WITH CONTROLLED COPY STAMP

Document No: 01525

ISSUE 6