

NT120 & NT121 TIME SEQUENCER

APPLIES TO MODELS

NT110
NT120
NT121
NT210
NT211


FUNCTION BUTTON
Select required function.

SCROLL BUTTON
Press this button to scroll through
the list of "functions".

ENTER
Press this button to set the
selected function (if allowed).

DISPLAY

Displays the current output states
by cycling the display through the
channel number state.
The display can also show the
selected function.

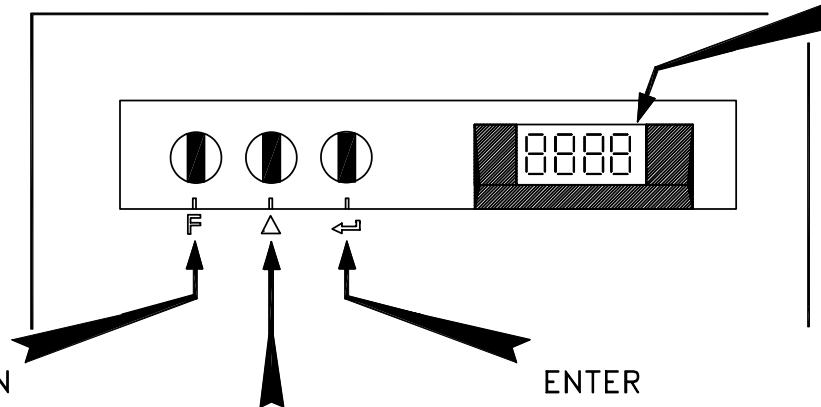

TO SELECT CHANNEL OVERRIDE MODE

PRESS **F**. THE DISPLAY SHOW "func".

WITHIN 5 SECONDS PRESS **Δ**

PRESS **Δ** UNTIL MESSAGE 'Or-1', 'Or-2', 'Or-3' OR 'Or-4' AS REQUIRED APPEARS.

WAIT UNTIL 'oFF' IS DISPLAYED.

PRESS **⇐** IF ALLOWED 'on' SHOULD APPEAR.

PRESS **Δ** UNTIL 'data' APPEARS. THE DISPLAY WILL RETURN TO DISPLAYING THE CHANNEL STATES.

NOTE IF ANY OF THE CHANNELS IS NOT AVAILABLE THEN '--' IS DISPLAYED INSTEAD OF 'oFF'

JTL HELPDESK NO. 07010 701011



JTL SYSTEMS LTD.
41 KINGFISHER COURT, NEWBURY,
BERKS, RG14 5SJ

Document No: 01748 Sept 99 ISSUE 2