


## OP1xx & OP2xx OPTIMISERS

### APPLIES TO MODELS

OP112  
OP124  
OP148  
OP212  
OP224  
OP248  
OP272

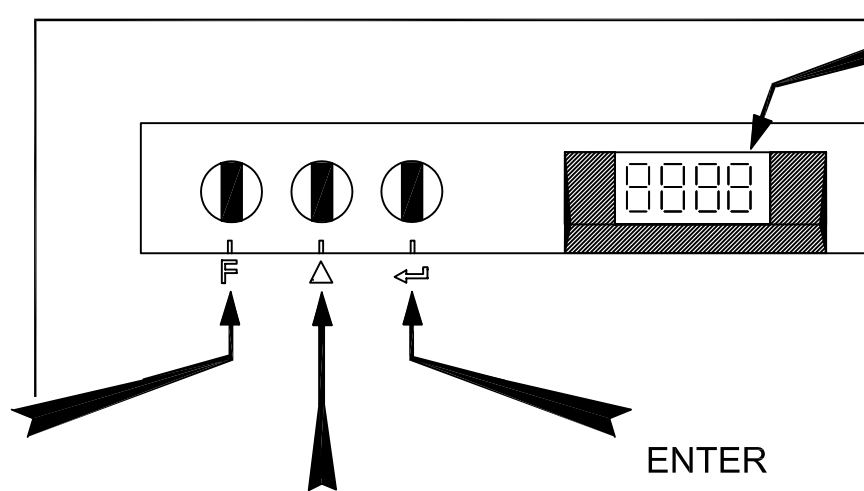

### DISPLAY

Displays the current output states by cycling the display through the optimising pressures or alarm condition.

oFF - Unit disabled  
Or - Unit on override  
FAIL - Network communications failure

The display can also show the selected function.

### FUNCTION BUTTON

Select required function.

### SCROLL BUTTON

Press this button to scroll through the list of "functions".

### ENTER

Press this button to set the selected function (if allowed).

### TO SELECT OPTIMISER OVERRIDE MODE

PRESS **F** THE DISPLAY SHOW "func".

WITHIN 5 SECONDS PRESS **Δ**

PRESS **Δ** UNTIL MESSAGE 'Or' APPEARS.

WAIT UNTIL 'oFF' IS DISPLAYED.

PRESS **⇐** IF ALLOWED 'on' SHOULD APPEAR

PRESS **Δ** UNTIL 'data' APPEARS. THE DISPLAY WILL RETURN TO DISPLAYING THE OPTIMISING PRESSURE.

NOTE IF OVERRIDE IS NOT AVAILABLE THEN '--' IS DISPLAYED INSTEAD OF 'oFF'