


# JTL PACK CONTROLLERS

## Guidelines for Compressor Control.

### Schematic arrangement.

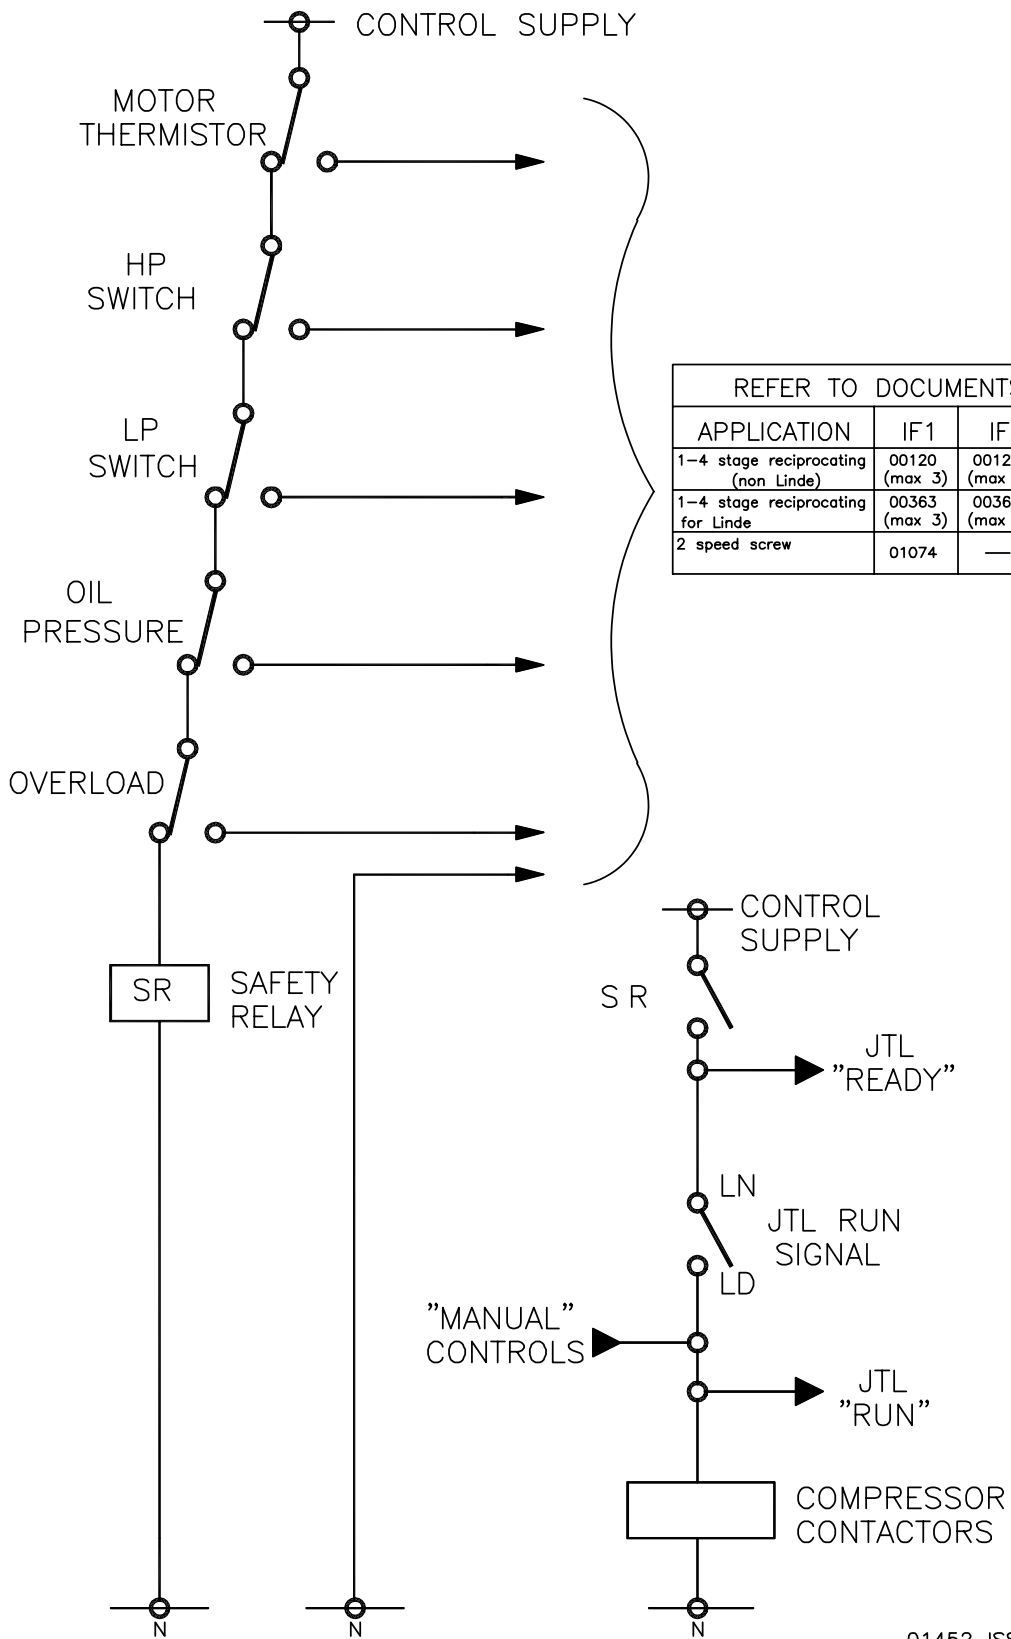

REFER TO DOCUMENTS IN TABLE

APPLICATION	IF1	IF2	IF11	IF12
1-4 stage reciprocating (non Linde)	00120 (max 3)	00120 (max 2)	02788 (max 4)	02785 (max 3)
1-4 stage reciprocating for Linde	00363 (max 3)	00363 (max 1)	02787 (max 3)	02784 (max 2)
2 speed screw	01074	—	02789	—