


Shop Floor Wiring Schematics (New installations)

NOTES:

1. For wiring in legacy installations see drg 03120.
2. For Network Controller connections see drg 03121, for ZM02/ZM05 see drg 03116 and 03117. For NJ04 see drg 03139.
3. The zone marshalling box should be mounted adjacent to the Network Controller.
4. Up to 8 CAT5 connections can be terminated in the ZM box per zone.
5. An NJ03 may have been used in place of an NJ04 historically, see drg 03122.

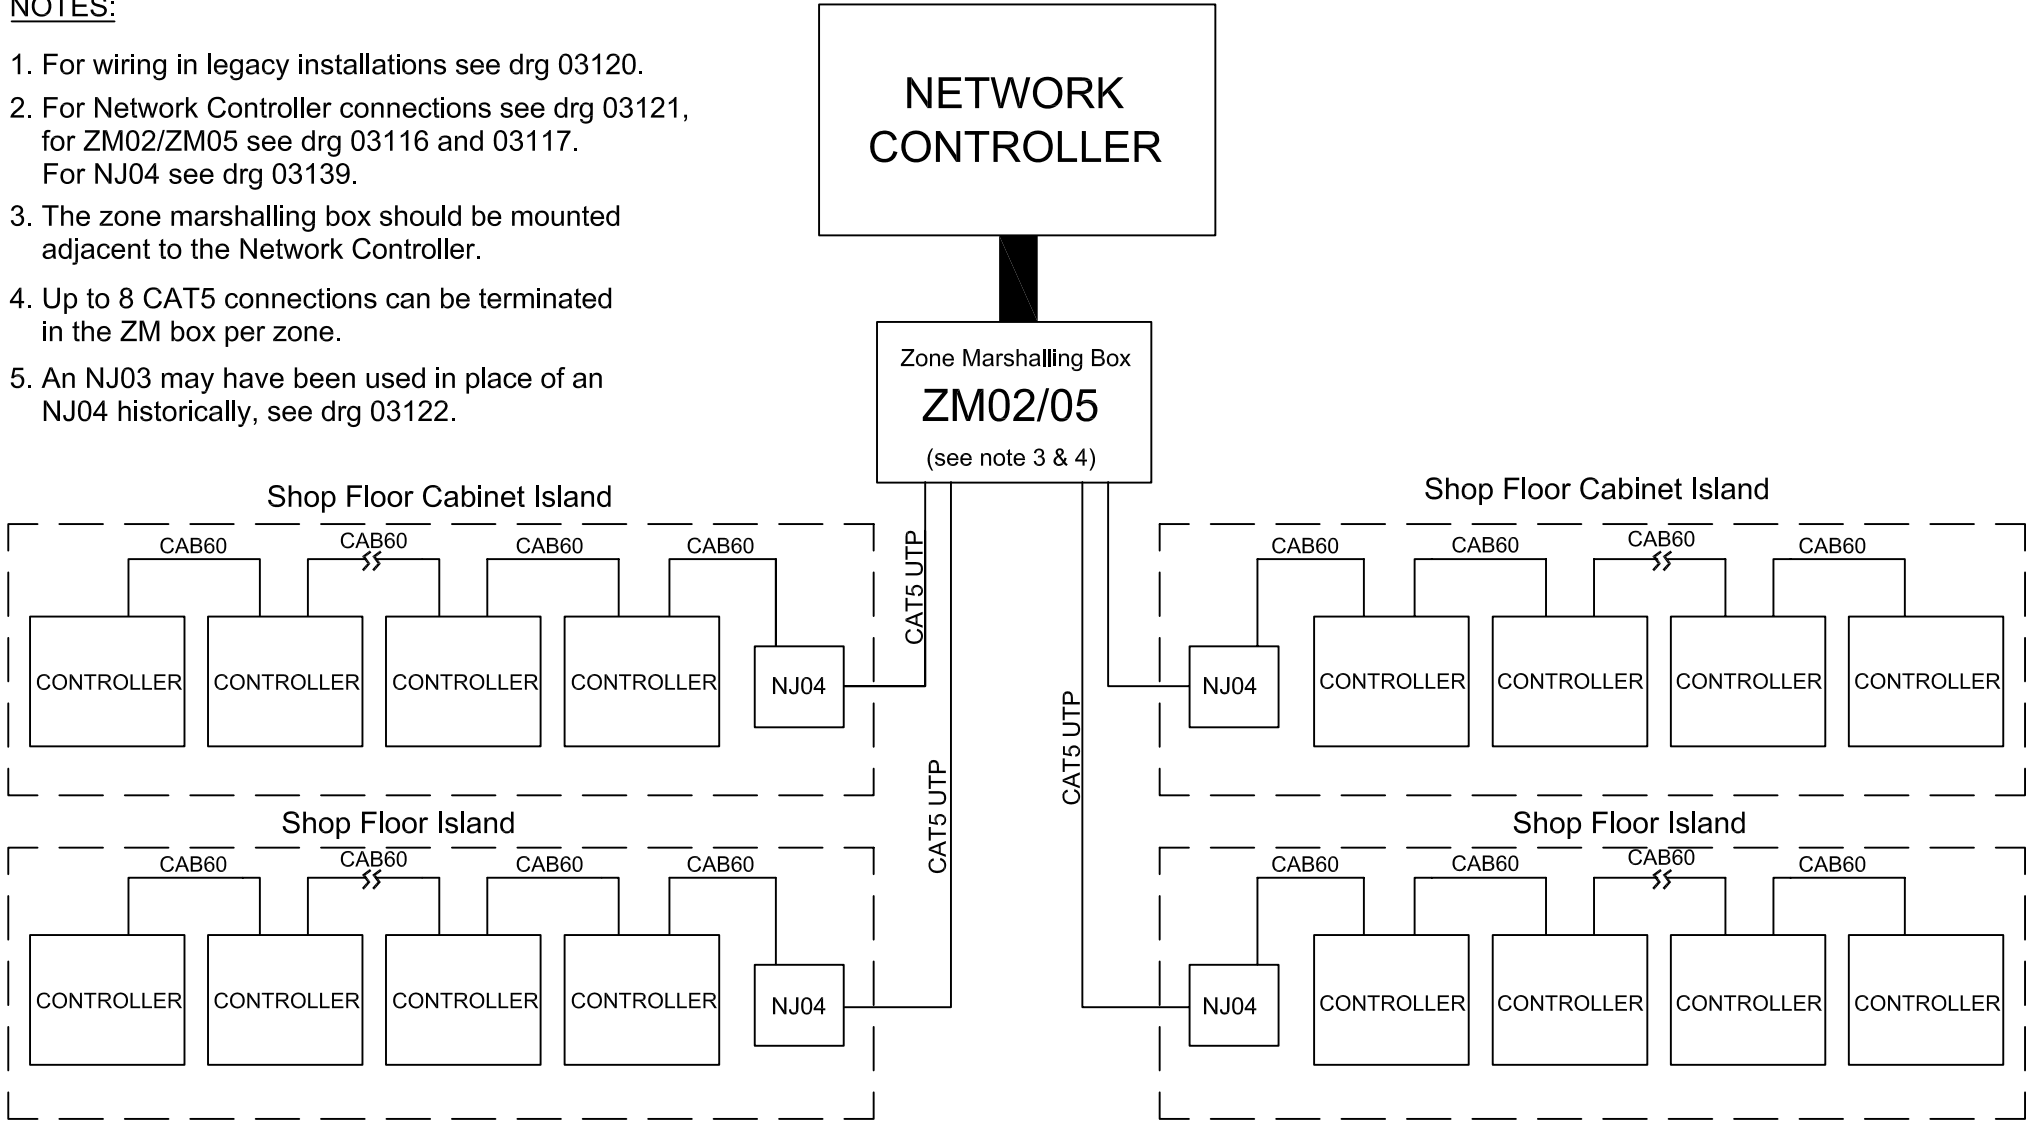

JTL SYSTEMS LTD
 41 KINGFISHER COURT, HAMBRIDGE RD,
 NEWBURY, BERKSHIRE: RG14 5SJ
 TEL: 01635 263646 FAX: 01635 263647

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

DOC 03118 ISS 3 Nov 2004