


Application Drawing for 0-10 V variable output compressor control using IF14 with EPIL Pack Controllers

Description:

JTL Plant Control Interface comprising 8 opto-isolated mains digital inputs 7 suppressed non-changeover relay outputs, and selectable current or voltage analogue output.

A JTL Maintenance Unit is used to configure this product.

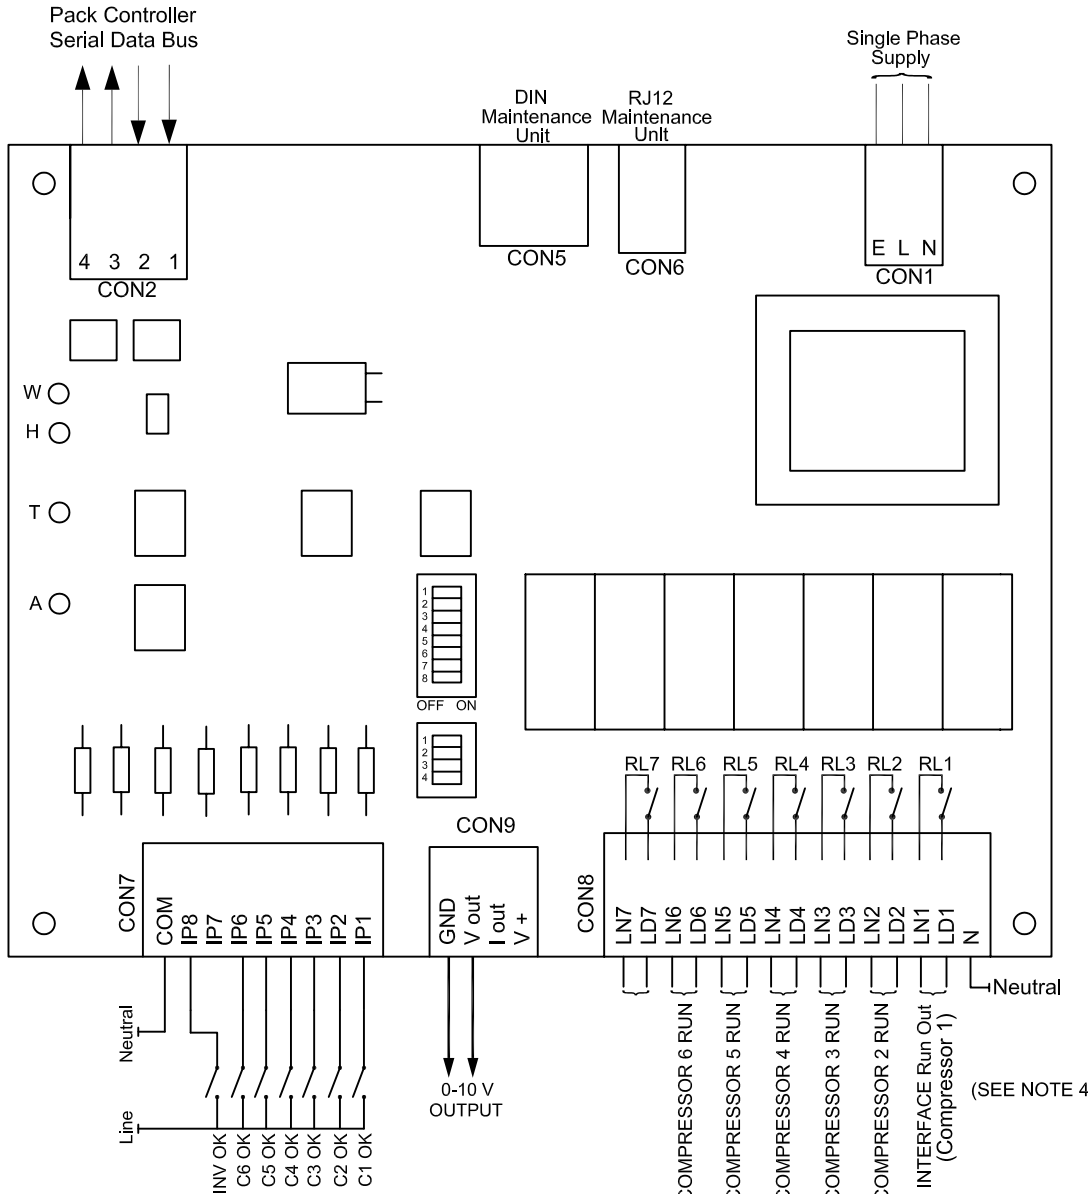

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP

CONFIGURATION		
ITEM	VALUE	FUNCTION
30	1	INTERFACE No
31	7	INTERFACE TYPE
32	3	ANALOGUE & DIGITAL
34	3	ANALOGUE MODE
40	1	SECONDARY INTERFACE No
41	3	SECONDARY INTERFACE TYPE

SW2	1	2	3	4	Function
	1	2	3	4	C = (ON Closed) O = (OFF Open)
	0	C	O	O	

NOTES:

- To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Ensure neutral is connected to terminal marked N. CON8 'N' must have neutral connected to it.
- A backup value to be used if serial data bus communications fail is set on item 35.
- Interface must be configured according to function using JTL Maintenance Unit.
- Relay RL1 de-energises when the analogue output is minimum ie 0 V.
- Line voltage present on Input 1 corresponds to inverter healthy.

JTL SYSTEMS LTD
41 KINGFISHER COURT, HAMBRIDGE RD,
NEWBURY, BERKSHIRE: RG14 5SJ
TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
1	ORIGINAL ISSUE	MJK	02/09

TITLE:
0-10 V VARIABLE OUTPUT COMPRESSOR INTERFACE FOR JTL PACK CONTROLLERS

PROJ.	DRG No:	SHT	OF	ISS.
	03509	1	1	1