## Application Drawing for 0-10 V variable output condenser control using IF14 with EP6U & EPLT Pack Controllers

## Description:


JTL Plant Control Interface comprising 8 opto-isolated mains digital inputs 7 suppressed non-changeover relay outputs, and selectable current or voltage analogue output.

A JTL Maintenace Unit is used to configure this product.

## Configuration

Interface type ITEM 31	Interface No ITEM 30		
4	0		
Analogue Mode ITEM 34	SW2 *		
4	0000		

\* C = Closed O = Open

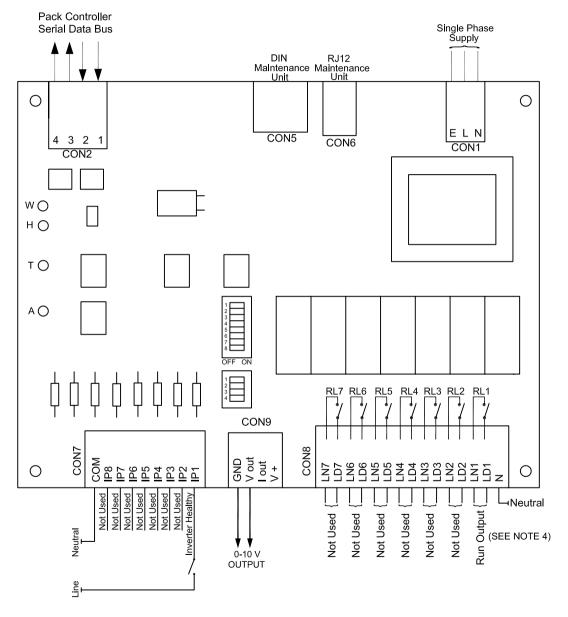

## NOTES:

- 1. To ensure that internally fitted suppressors work correctly, connect line voltages to terminals prefixed LN and the corresponding loads to terminals prefixed LD. Ensure neutral is connected to terminal marked N. CON8 'N' must have neutral connected to it.
- 2. A backup value to be used if serial data bus communications fail is set on item 35. Note that SW1 has no effect when IF14 is set for analogue mode.
- Interface must be configured according to function using JTL Maintenance Unit.
- 4. Relay RL1 de-energises when the analogue output is minimum ie 0 V.
- 5. Line voltage present on Input 1 corresponds to inverter healthy.



JTL SYSTEMS LTD 41 KINGFISHER COURT, HAMBRIDGE RD, NEWBURY, BERKSHIRE: RG14 5SJ TEL: 01635 263646 FAX: 01635 263647

ISSUE	DESCRIPTION	APP'D	DATE
1	ORIGINAL ISSUE	MJK	08/10

TITLE:

0-10 V VARIABLE OUTPUT CONDENSER INTERFACE FOR EP6U & EPLT PACK CONTROLLERS

PROJ.	DRG No:	SHT	OF	ISS.
	03726	1	l 1	1

THIS IS AN UNCONTROLLED COPY - UNLESS STAMPED WITH CONTROLLED COPY STAMP